

10/522670

**Wolfgang Kossl
DOOR ACTUATOR
566/43619
Sheet 1 of 5**


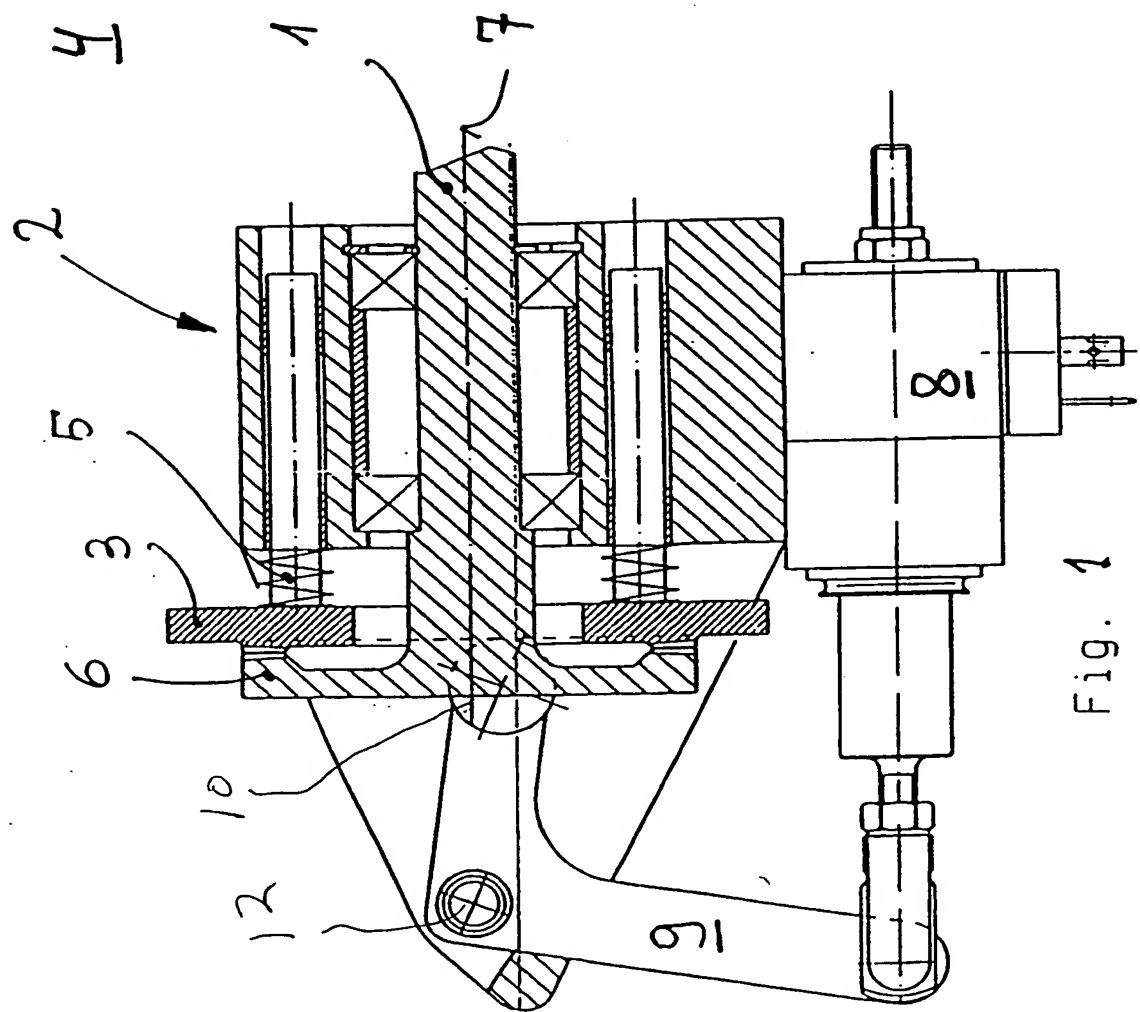


Fig. 1

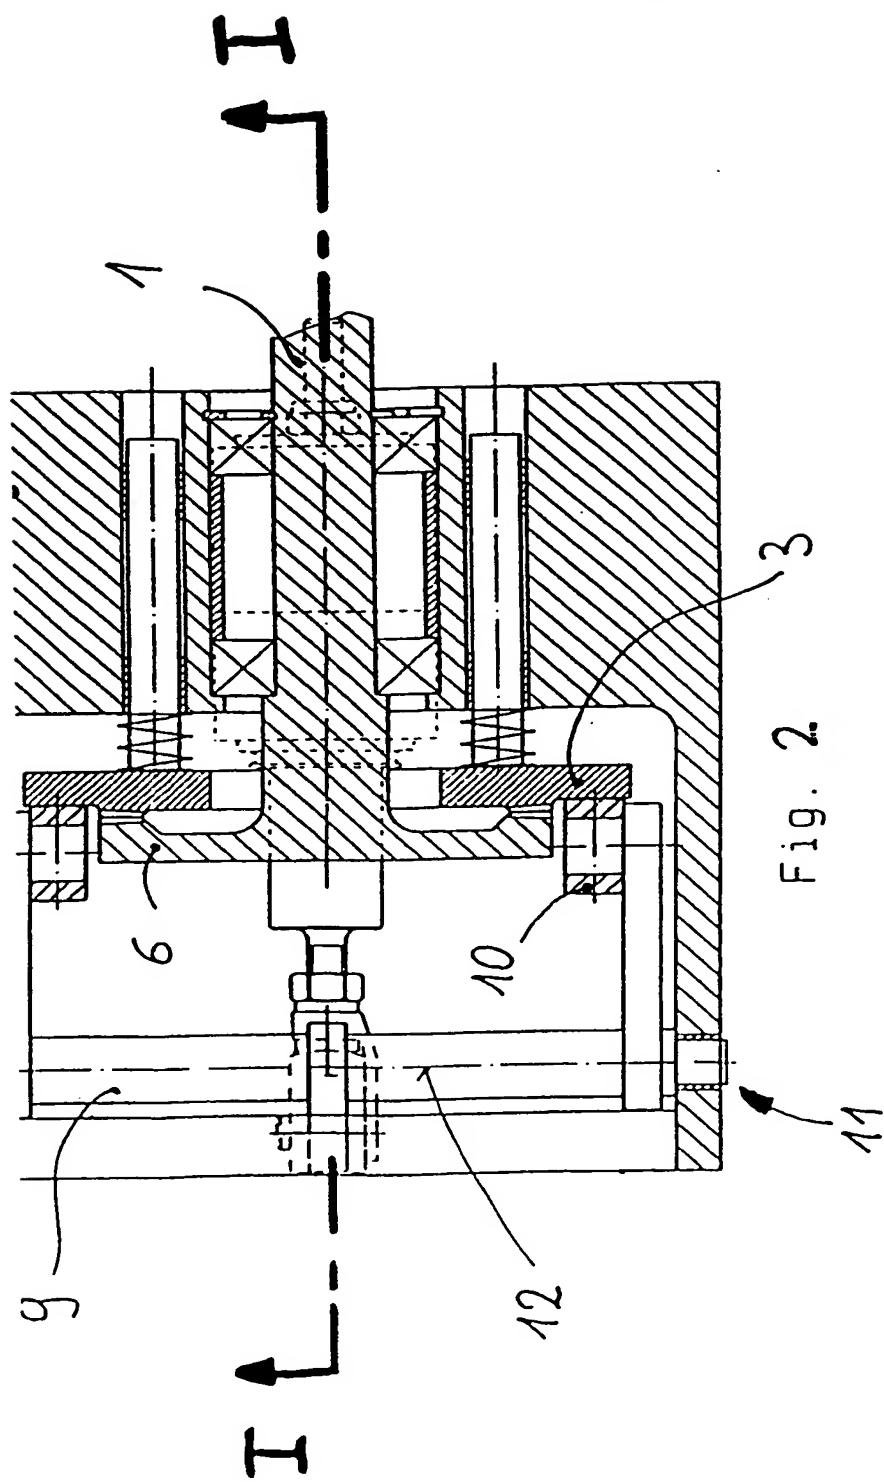

Wolfgang Kossl
DOOR ACTUATOR
566/43619
Sheet 3 of 5

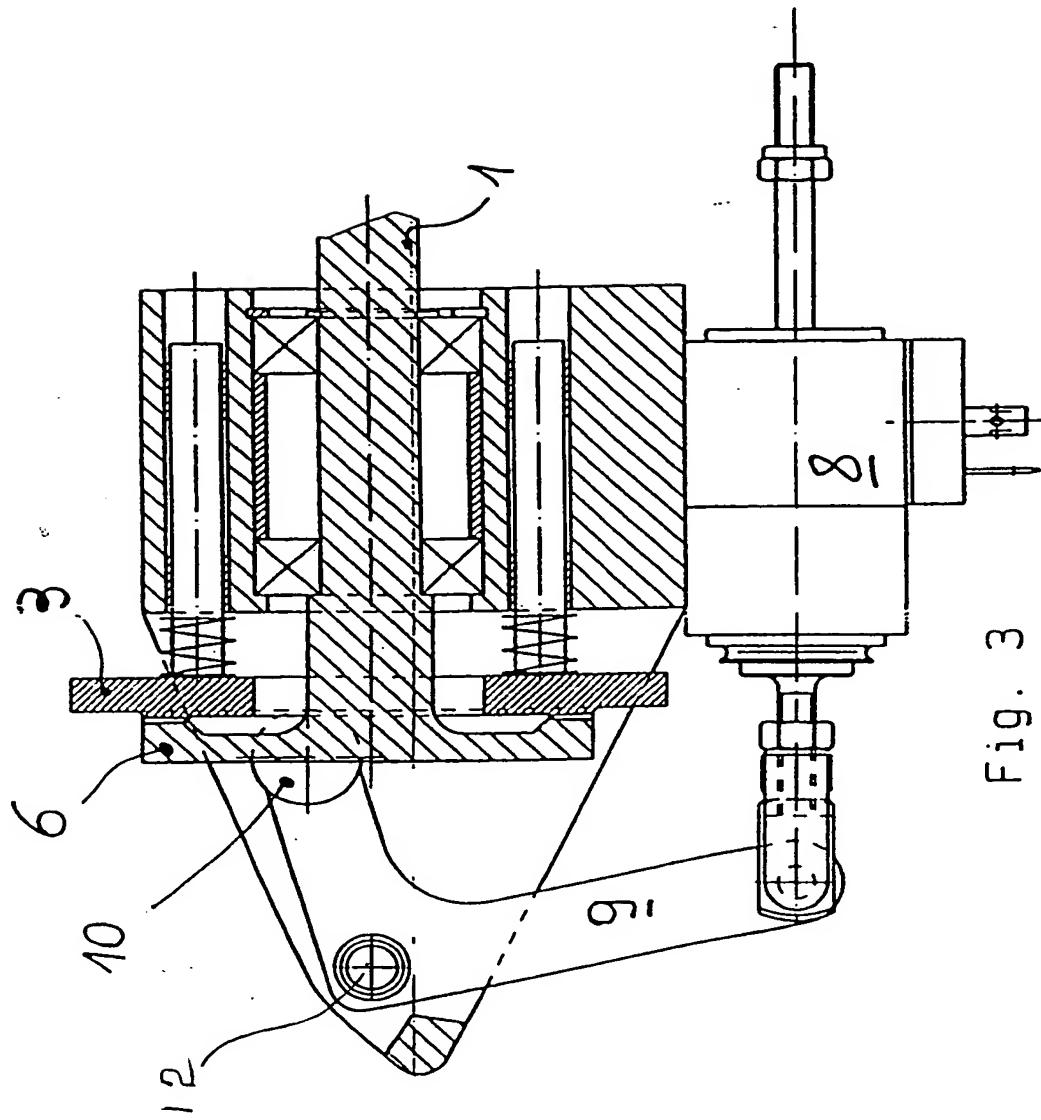


Fig. 3

10/522670

Wolfgang Kossl
DOOR ACTUATOR
566/43619
Sheet 4 of 5

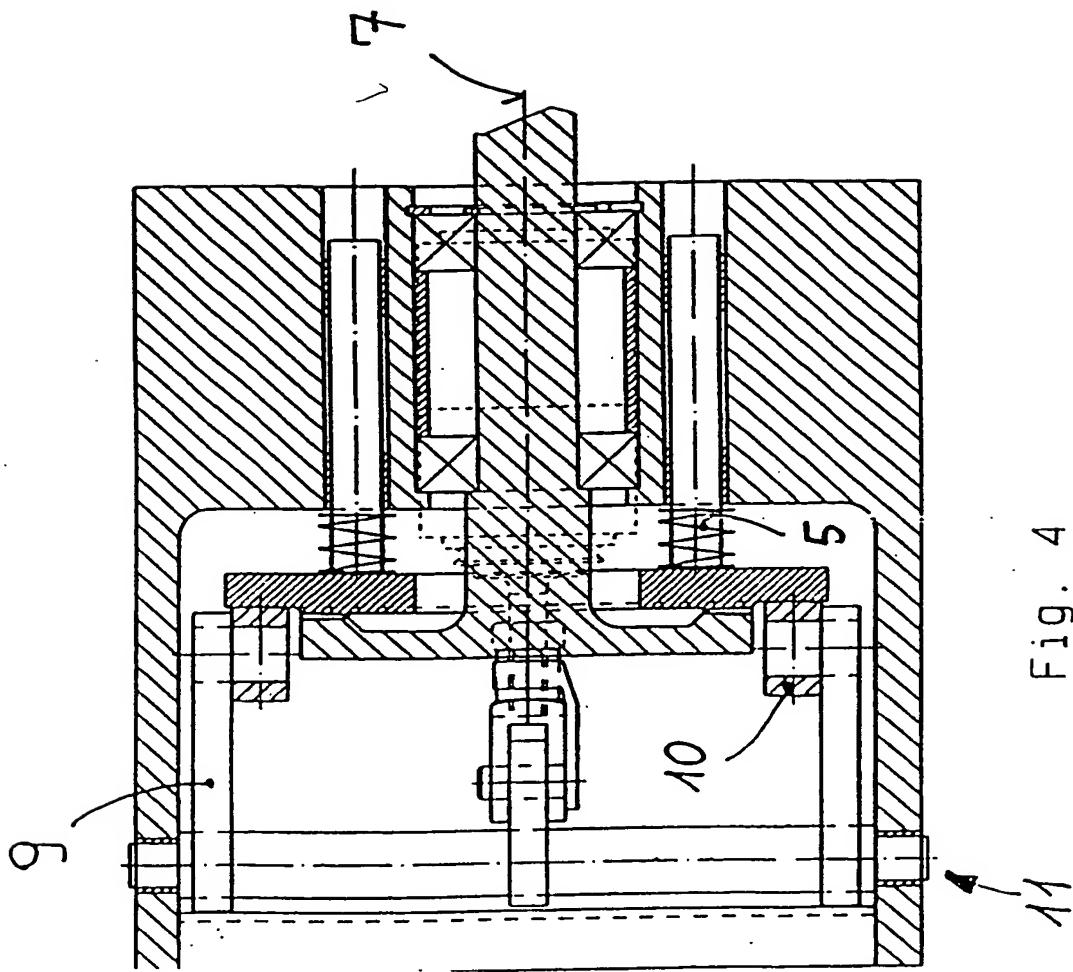


Fig. 4

10/522670
a. Koss

Wolfgang Kossl
DOOR ACTUATOR
566/43619
Sheet 5 of 5

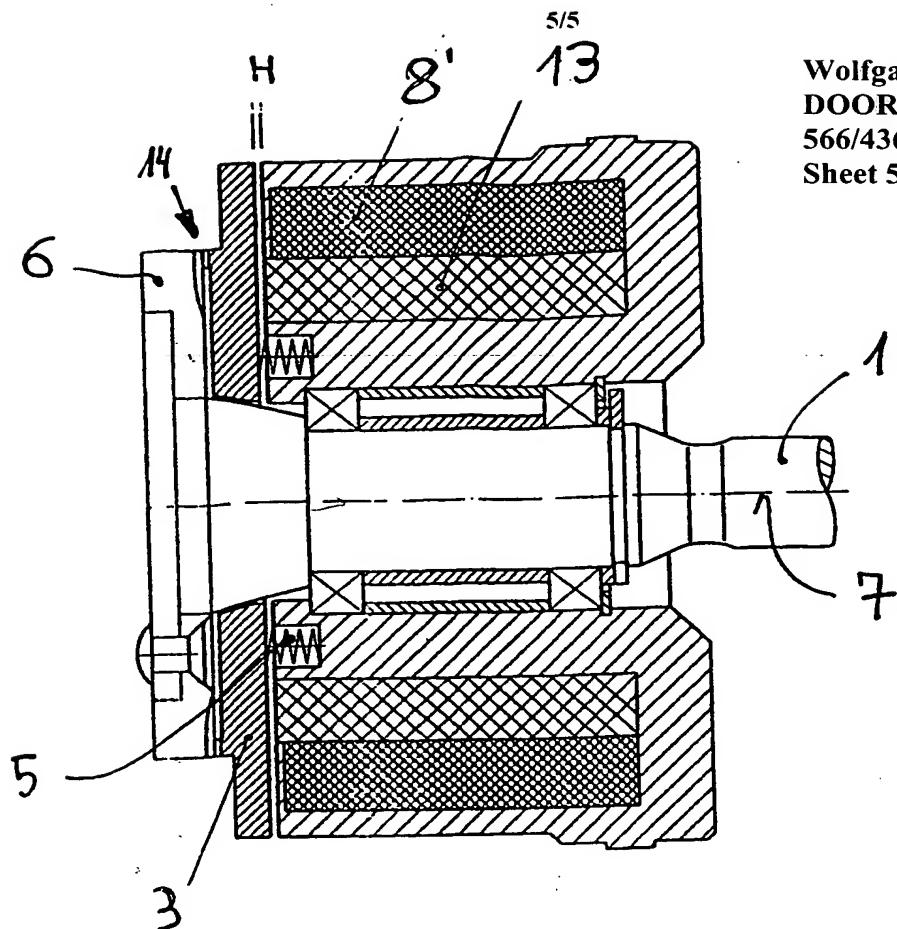


Fig. 5

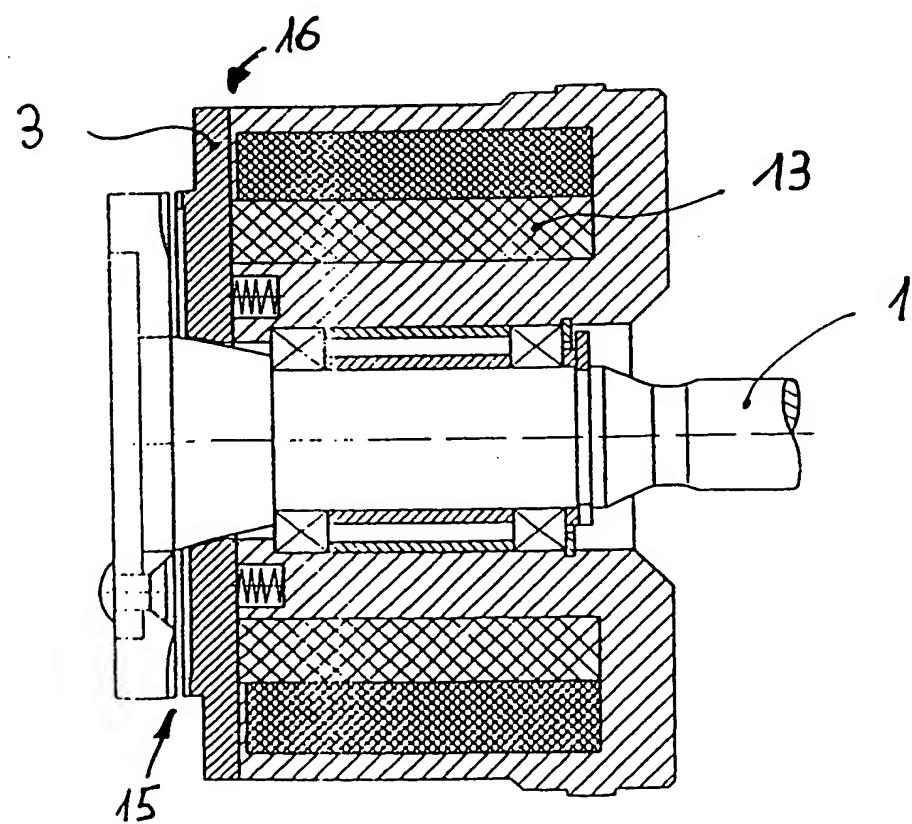


Fig. 6